

THANK YOU FOR PURCHASING YOUR NEW
LOBOY INSULATED OUTDOOR DECK
BOX

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.

Tools needed for assembly:

Phillips screwdriver or cordless drill with Phillips head attachment and tape measure.

1. Remove 2 each legs from box.
2. Remove Deck Box lid.
3. Remove Deck Box.
4. Remove 2 each legs from bottom of box.
5. Place box on level surface with front of box facing you.
6. Front and rear legs are marked for placement on box. Legs are predrilled.
7. Place LF leg onto box and align with top of box – Fig. 1 & Fig. 1a.
8. Use 6 each screws provided to attach leg.
9. Repeat instructions for RF leg.
10. Turn box over and repeat instructions to attach rear legs.
11. Once legs are attached to box, stand box up.
12. Take lid and place lid on box with handle facing front of box.
13. Remove hinges from packet provided and use 4 each screws provided to attach first hinge – Fig. 2.
14. Repeat step 13 for second hinge.
15. Once hinges are complete, you will need to open lid and lean box against a solid surface to achieve correct angle to apply the chain – Fig. 3.
16. Measure 5 inches from back of lid to install first screw for chain. Place screw through chain – Fig. 4, and attach to lid. Do not tighten screw fully so chain can move freely.
17. Chain will need to be pulled tight and second screw placed in Deck Box – Fig. 5.
18. Remove stickers from box.



Fig. 1



Fig. 3

Fig. 1a

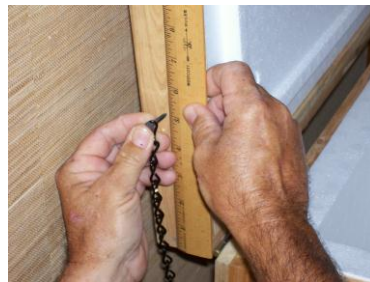


Fig. 4

Fig. 2



Fig. 5